

# JP-08/JU-06/JX-03 Version 1.10 Supplementary Manual

This manual explains the functions that were added in version 1.10 of the JP-08/JU-06/JX-03.

Read this in conjunction with the manual of the relevant device.

## Control Change Output Switch

1. While holding down the [(see following table)] button, press the [1] button.

On the JP-08	[DUAL] button
On the JU-06	[CHORUS 2] button
On the JX-03	[CHORUS] button

\* Continue to hold down the [DUAL] [CHORUS 2] [CHORUS] button, and proceed to the next step.

2. Use the numeric buttons to select a value, and then release the [(button you had been pressing)] button to confirm the value.

Parameter	Value	Explanation
Control change output mode	[1]	No output
	[2]	Output only to USB
	[3]	Output only to MIDI
	[4]	Output to USB and MIDI

### MEMO

The control changes of the Lower part are transmitted and received on the channel that is one higher (+1) than the specified channel. However, if channel 16 is specified, the Lower part uses channel 1.

## Battery Operation Fixed Mode

In this mode, the unit does not switch to bus power even when it is connected to a USB port.


This lets you use the unit even with an unpowered USB port.

1. While holding down the [(see following table)] button, turn on the power.

On the JP-08	PATCH PRESET [1] button
On the JU-06	PATCH NUMBER [1] button
On the JX-03	PATCH [9] button


### NOTE

- Batteries are required.
- This operation is required each time you turn on the power.

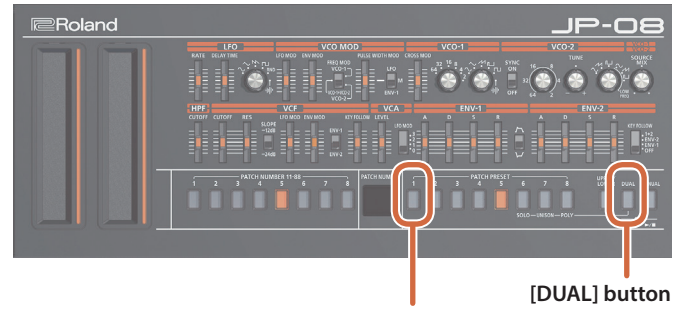


[DUAL] button

PATCH PRESET [1] button

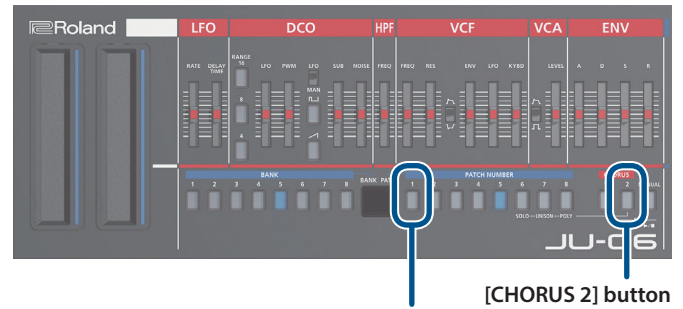

[CHORUS 2] button

 PATCH NUMBER [1] button

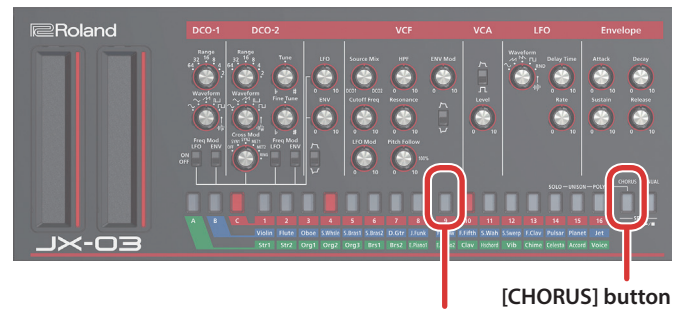

[CHORUS] button

PATCH [9] button